

RIDGIGULLY

Making Space for Water



Product code : RG450/900mm



Place Ridgigully in excavation and nestle into 150mm concrete base layer (allow to dry)



Connect pipe



If formwork required, make sure all gaps are sealed



Fill Ridgigully with water to weight - down concrete surround prior to pouring



More efficient way to fill Ridgigully with water



Cover top prior to concrete pour



Begin concrete surround pour




Concrete surround



Place concrete pad on level surface



Finished install - Ready for gully grating & finished surface level

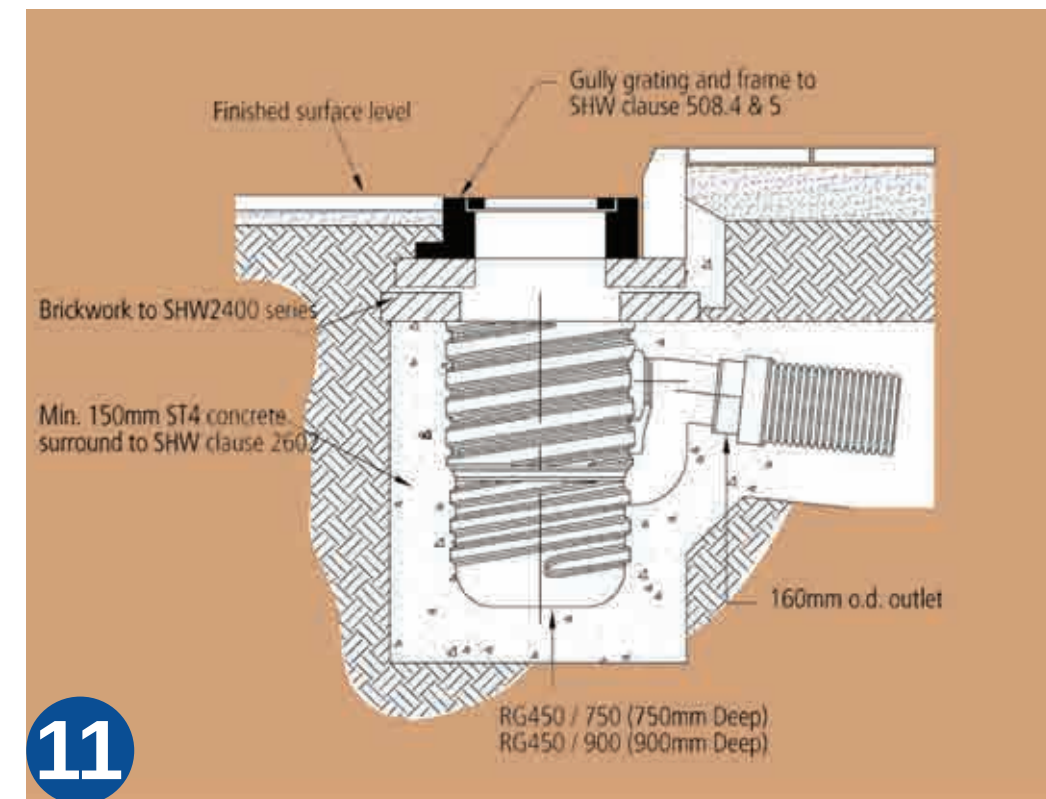

Typical Ridgully installation details